

# ArtNet-DMX Virtual Ethernet COM Port

Setup Guide

**ART  
NET**  
ETHERNET

Art-Net™ Designed by and Copyright Alderamin Group Ltd.

**DMX** ®  
**4**  
**ALL**

## DMX4ALL-Command support

The ArtNet-DMX Interfaces

- ArtNet-DMX STAGE-PROFI 1.1
- ArtNet-DMX STAGE-PROFI DR 1.1
- ArtNet-DMX TWIN PoE

has an additional communication-port which can receive the data from TCP-bundle at the port 10001. This port uses the DMX4ALL-Commands in this way that the **above mentioned interfaces** are compatible to the LAN-DMX STAGE-PROFI.

### TCP-Control

For control the interface directly with the TCP-connection please use the preset IP-address and use the port 10001. The sent and received data are RAW-data bundle.

Please take the DMX4ALL-Commands which are possible from the separate DMX4ALL-Command description.

### VCP-Control

For the control with a COM-port a TCP-VCP-program must be installed which provides a virtual Com port (VCP).

We recommend the tool *Serial to Ethernet Connection* which has been tested by us. You find this tool on the enclosed CD and as an download in our support-sector.

During the installation you have to enter a password (see illustration).





## Risk-Notes

You purchased a technical product. Conformance to the best available technology the following risks should not be excluded:

**Failure risk:** The device can drop out partially or completely at any time without warning. To reduce the probability of a failure a redundant system structure is necessary.

**Initiation risk:** For the installation of the board, the board must be connected and adjusted to foreign components according to the device paperwork. This work can only be done by qualified personnel, which read the full device paperwork and understand it.

**Operating risk:** The change or the operation under special conditions of the installed systems/components could as well as hidden defects cause to breakdown within the running time.

**Misusage risk:** Any nonstandard use could cause incalculable risks and is not allowed.

**Warning:** It is not allowed to use the device in an operation, where the safety of persons depends on this device.





DMX4ALL GmbH  
Reiterweg 2A  
D-44869 Bochum  
Germany

Last Change: 12.08.2017

© Copyright DMX4ALL GmbH

All rights reserved. No part of this manual may be reproduced in any form (photocopy, pressure, microfilm or in another procedure) without written permission or processed, multiplied or spread using electronic systems.

All information contained in this manual was arranged with the greatest care and after the best knowledge. Nevertheless, errors are to be excluded not completely. For this reason, I see myself compelled to point out that I can take over neither a warranty nor the legal responsibility or any adhesion for consequences, which decrease/go back to incorrect data. This document does not contain assured characteristics. The guidance and the characteristics can be changed at any time and without previous announcement.