

# Stepperdriver


## BRIDGE

**DMX** <sup>®</sup>  
**4**  
**ALL**

## Description

The stepper motor driver BRIDGE can be used to connect external stepper motor drivers to the DMX-Stepper-Control.

The signals STEP, DIR and ENABLE are bridged by the stepper motor driver BRIDGE to the motor connection and can thus be used for the control of an external stepper motor driver.

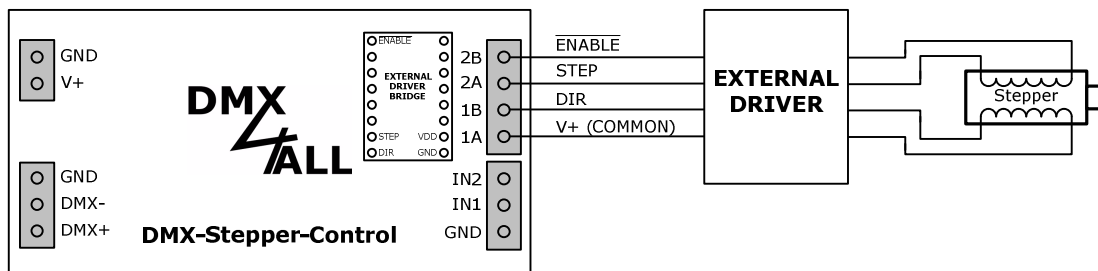

## Data sheet

**Connection:** 2x 8 pin row

**Dimensions:** 15,2mm x 20,3mm





DMX4ALL GmbH  
Reiterweg 2A  
D-44869 Bochum  
Germany

Last changes: 11.04.2019

© Copyright DMX4ALL GmbH

All rights reserved. No part of this manual may be reproduced in any form (photocopy, pressure, microfilm or in another procedure) without written permission or processed, multiplied or spread using electronic systems.

All information contained in this manual was arranged with largest care and after best knowledge. Nevertheless errors are to be excluded not completely. It is pointed out that neither a guarantee nor the legal responsibility or any liability for consequences which are due to incorrect information is assumed. This document does not contain assured characteristics. The guidance and the features may be changed at any time and without previous announcement