


DMX-LED-Dimmer CC4

User Manual



DMX [®]
4
ALL

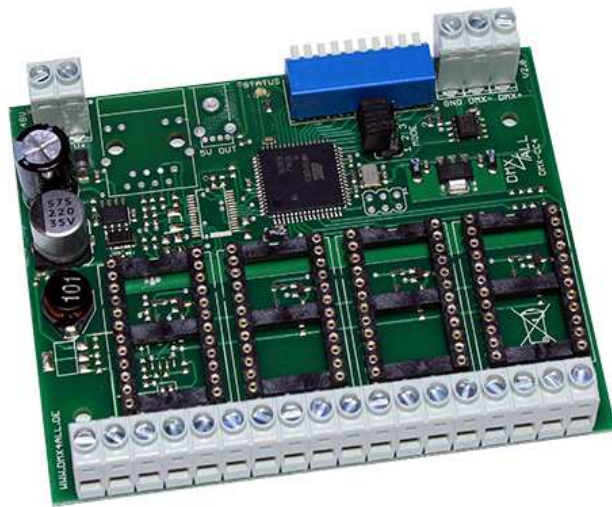

For your own safety, please read this user manual and warnings carefully before installation.

Contents

Description.....	3
Data Sheet.....	4
Content	4
Connection	5
DMX-Addressing	6
LED-Display.....	6
Constant current modules.....	7
DMX-FAIL-Function	8
Master-Dimmer	9
RDM	10
Factory Reset	12
Dimensions.....	13
Accessory	14
CE-Conformity	15
Disposal.....	15
Warning	15

Description

The **DMX-LED-Dimmer CC4** is designed for controlling LEDs, which are operated with constant current and works with up to 48V DC.

4 outputs with choose able constant current modules

Different constant current modules with different output currents are available for plug-on. The constant current modules are available as accessories and are not included in the scope of delivery.

For voltages from 12V up to 24V

The DMX-LED-Dimmer CC4 works with supply voltages from 12V up to 24V DC.

DMX failure behavior

An adjustable DMX FAIL function offers the option to hold the current state (HOLD) or to adopt a predefined value if the DMX signal fails.

LED state display

The DMX state is indicated via the LED status.

DMX-Masterdimmer

Optionally an additional DMX channel can be activated as master dimmer.

0% up to 100% dimmable

The connected LEDs are dimmed from 0% up to 100% via PWM.

RDM support

The DMX-LED-Dimmer CC4 allows configuration by RDM via DMX.

Top-hat rail housing available

The top-hat rail housing 1050 is available as accessory for the DMX-LED-Dimmer X9HR. Together with the top-hat rail housing 1050, the interface is optimally suited for control cabinet installation.

Data Sheet


Power supply:	9-48V DC 22mA@12V; 12mA@24V; 7mA@48V (Current consumption without LED-Module)
Output voltage:	Depends on the constant current module used
Output current:	Depends on the constant current module used
Protocol:	DMX512 RDM
DMX-Channels:	4 / 5 Channels
DMX-FAIL:	Hold / 0%-100%
Master dimmer:	activatable
PWM-Frequency:	244 Hz
Connections:	Screw terminals
Dimensions:	99mm x 82mm

Content

- 1x DMX-LED-Dimmer CC4
- 1x Quick manual german and english

Current modules are not included in the delivery!

Connection

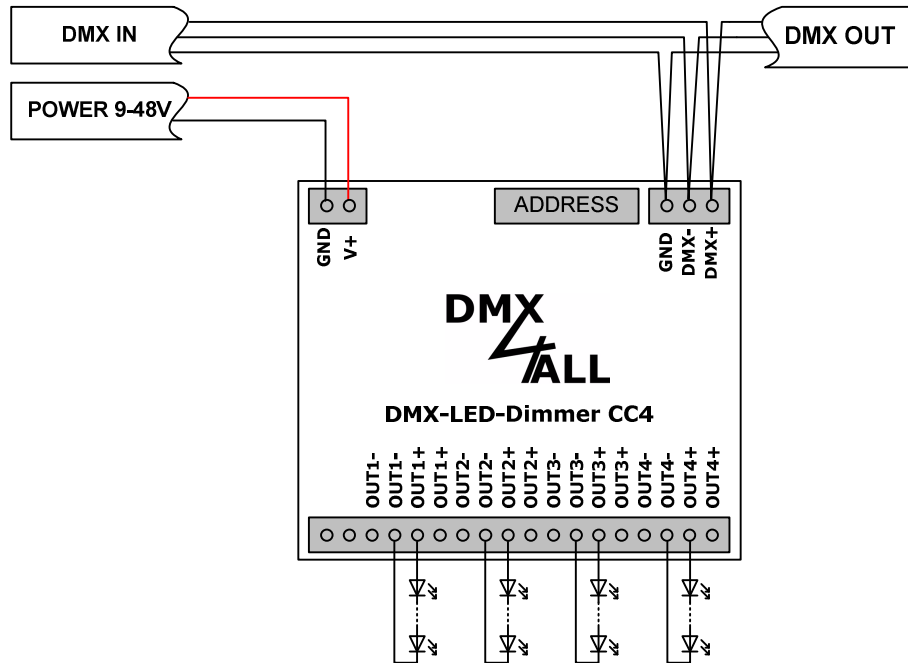


Never connect the terminals with each other, e.g. GND of the power supply and the terminal LED- of the output or the different LED terminals !!!

Never connect the single negative/positive outputs to the LEDs with each other !!! This may damages the LEDs and the LED drivers.

DMX-Addressing

The starting address is adjustable with the switches 1 to up 9.

Switch 1 has the valency 2^0 (=1), switch 2 the valency 2^1 (=2) etc. until switch 9 has the valency 2^8 (=256). In total the switches showing ON correlate with the starting address.

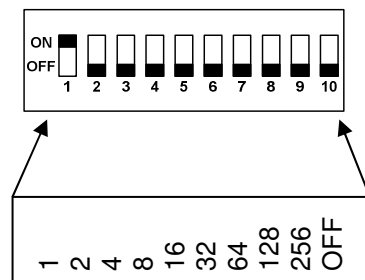

The DMX start address can also be set via the RDM parameter DMX_STARTADDRESS. All switches must be in the OFF position for RDM operation.

LED-Display

The integrated green LED is a multi function display.

During the normal operation mode the LED lights permanently. In this case the device is working.

Furthermore, the LED shows the current status. In this case the LED lights up in short pitches and then are missing for longer time.

The number of the flashing lights is equal to the event number:


Error	Error Description	Description
1	No DMX	No DMX-Signal detected at signal input
2	Addressing-Error	Check if a valid DMX starting address is adjusted
4	Factory Reset	A Factory-Reset was executed

Constant current modules

The following constant current modules for the DMX-LED-Dimmer CC4 are available as accessory:

- Constant current LED-Driver LDD-300H (300mA)
- Constant current LED-Driver LDD-350H (350mA)
- Constant current LED-Driver LDD-500H (500mA)
- Constant current LED-Driver LDD-600H (600mA)
- Constant current LED-Driver LDD-700H (700mA)
- Constant current LED-Driver LDD-1000H (1000mA)
- Constant current LED-Driver LDD-1200H (1200mA)
- Constant current LED-Driver LDD-1500H (1500mA)


Insert the constant current module that the output of the module (Vout) shows towards output terminal:

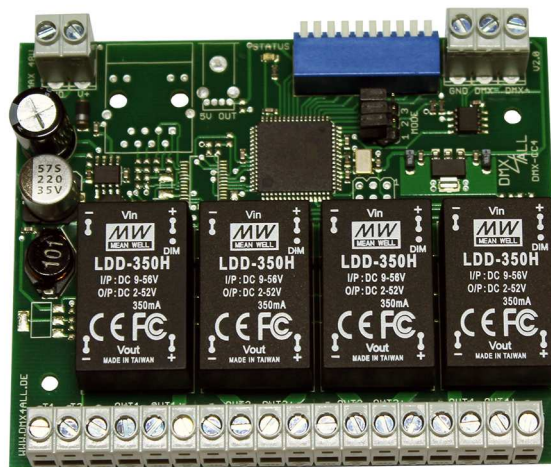


DMX failure behavior

The **DMX-LED-Dimmer CC4** can hold the last value, switch on or switch off the LED outputs on DMX fail.

This DMX-Fail option is selectable with Jumper 2 and 3.

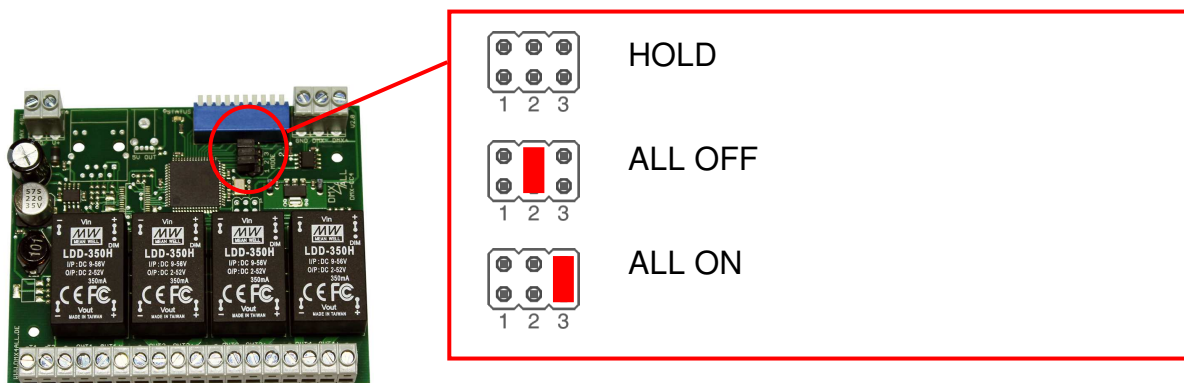


 After voltage drop the held values are not restored by the HOLD function. In this case the values are set to 0 (OFF).

 Via the RDM parameter DMX_FAIL_MODE the level can be adjusted also.


Master-Dimmer

The **DMX-LED-Dimmer CC4** has one Master-Dimmer which can be activated.

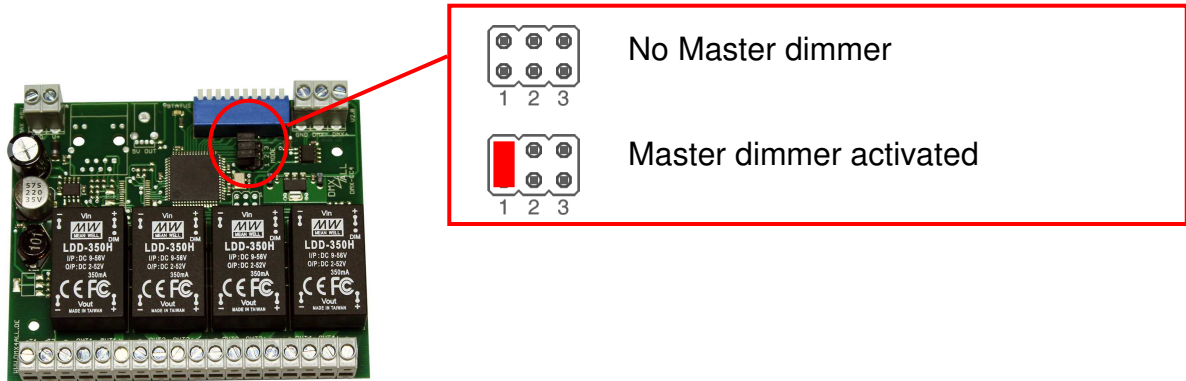

Master dimmer

The DMX channel which is set as start-address is used as Master-Dimmer for all 4 outputs. The DMX-Addresses assignment is as follows:

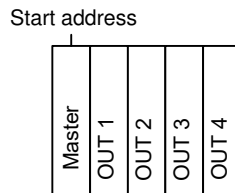

Via the RDM parameter PERSONALITY also the Masterdimmer can also be adjusted. No jumper must be set for RDM operation.

RDM

RDM is the short form for **R**emote **D**evice **M**anagement.

As soon as the device is within the system, device-dependent settings can occur remotely via RDM command due to the uniquely assigned UID. A direct access to the device is not necessary.



If the DMX start address is set via RDM, all address switches at the DMX-LED-Dimmer CC4 must be set to OFF ! A DMX start address set by the address switches is always prior !

This device supports the following RDM commands:

Parameter ID	Discovery Command	SET Command	GET Command	ANSI/PID
DISC_UNIQUE_BRANCH	✓			E1.20
DISC_MUTE	✓			E1.20
DISC_UN_MUTE	✓			E1.20
DEVICE_INFO			✓	E1.20
SUPPORTED_PARAMETERS			✓	E1.20
PARAMETER_DESCRIPTION			✓	E1.20
SOFTWARE_VERSION_LABEL			✓	E1.20
DMX_START_ADDRESS		✓	✓	E1.20
DEVICE_LABEL		✓	✓	E1.20
MANUFACTURER_LABEL			✓	E1.20
DEVICE_MODEL_DESCRIPTION			✓	E1.20
IDENTIFY_DEVICE		✓	✓	E1.20
FACTORY_DEFAULTS		✓	✓	E1.20
DMX_PERSONALITY		✓	✓	E1.20
DMX_PERSONALITY_DESCRIPTION			✓	E1.20
DISPLAY_LEVEL		✓	✓	E1.20
DMX_FAIL_MODE		✓	✓	E1.37

Parameter ID	Discovery Command	SET Command	GET Command	ANSI/ PID
SERIAL_NUMBER ¹⁾			✓	PID: 0xD400
IDENTIFY_MODE ¹⁾		✓	✓	PID: 0xD402

1) Manufacturer depending RDM control commands (MSC - Manufacturer Specific Type)

Manufacturer depending RDM control commands:

SERIAL_NUMBER

PID: 0xD400

Outputs a text description (ASCII-Text) of the device serial number.

GET Send: PDL=0
 Receive: PDL=21 (21 Byte ASCII-Text)

IDENTIFY_MODE

PID: 0xD402

Sets the mode that is executed with IDENTIFY_DEVICE.

GET Send: PDL=0
 Receive: PDL=1 (1 Byte IDENTIFY_MODE_ID)

SET Send: PDL=1 (1 Byte IDENTIFY_MODE_ID)
 Receive: PDL=0

IDENTIFY_MODE_ID	Funktion
0	FULL Identify All outputs switch ON / OFF simultaneously and the status LED flashes
1	LOUD Identify The outputs switch ON / OFF one after the other and the status LED flashes
2	QUIET Identify The outputs do not switch, only the status LED flashes

Factory Reset



Before running the Factory Reset, read all steps carefully.

To reset the **DMX-LED-Dimmer CC4** to delivery state, proceed as follows:

- Turn off device (disconnect power supply)
- Set DIP switch 1 up to 10 to ON
- Turn on device (connect power supply)
- The LED lights up 20x during ca. 3 seconds
 - ➔ While the LED lights up set DIP switch 10 to OFF
- Now, the Factory Reset is executed
 - ➔ The LED lights up with error code 4
- Turn off device (disconnect power supply)
- Now, the device can be used




If a Factory Reset is needed again, this procedure can be repeated at any time.



The RDM parameter `FACTORY_RESET` can also be used to reset the DMX LED dimmer CC4 to the delivery state.

Dimensions

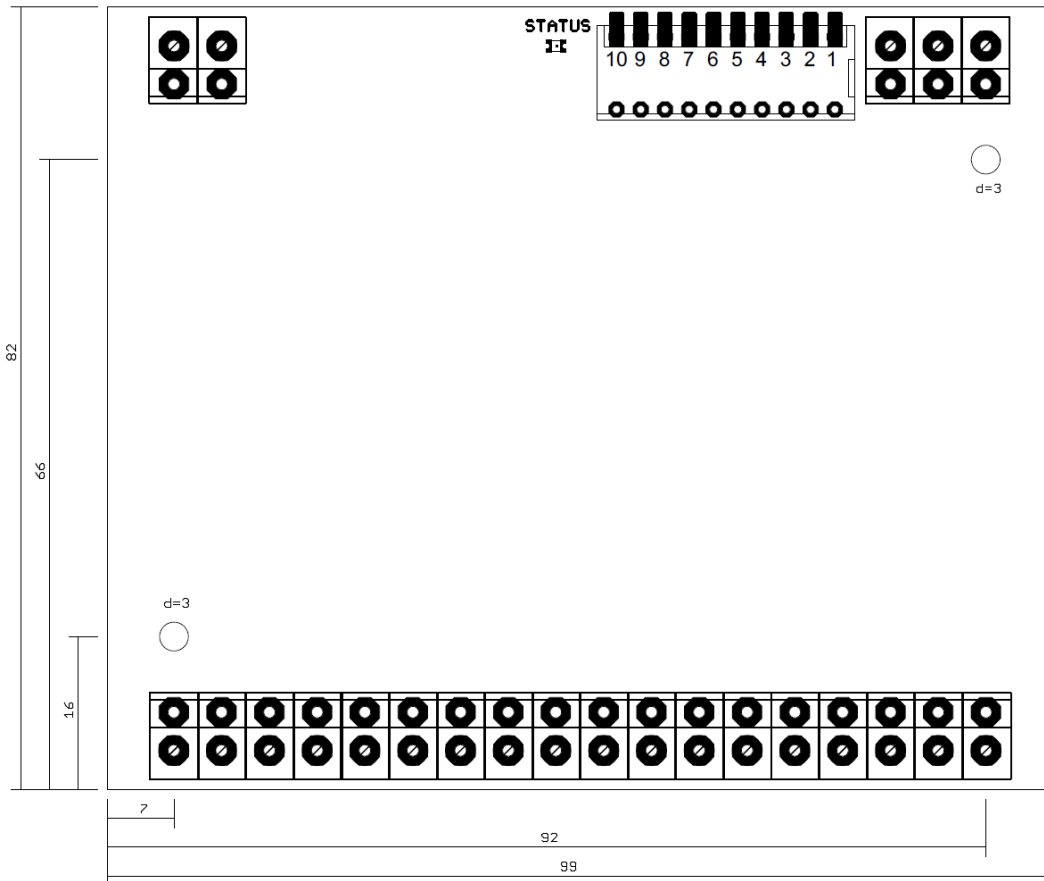

(all details in mm)

Accessory

Top-hat rail mounting 1050



Constant current LED-Module

- Constant current LED-Driver LDD-300H
- Constant current LED-Driver LDD-350H
- Constant current LED-Driver LDD-500H
- Constant current LED-Driver LDD-600H
- Constant current LED-Driver LDD-700H
- Constant current LED-Driver LDD-1000H
- Constant current LED-Driver LDD-1200H
- Constant current LED-Driver LDD-1500H




CE-Conformity



This assembly (board) is controlled by a microprocessor and uses high frequency. In order to maintain the properties of the module with regard to CE conformity, installation into a closed metal housing in accordance with the EMC directive 2014/30/EU is necessary.

Disposal

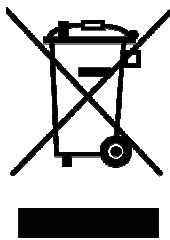

Electrical and electronic products must not be disposed in domestic waste. Dispose the product at the end of its service life in accordance with applicable legal regulations. Information on this can be obtained from your local waste disposal company.

Warning



This device is no toy. Keep out of the reach of children. Parents are liable for consequential damages caused by nonobservance for their children.



DMX4ALL GmbH
Reiterweg 2A
D-44869 Bochum
Germany

Last changes: 23.02.2022

© Copyright DMX4ALL GmbH

All rights reserved. No part of this manual may be reproduced in any form (photocopy, pressure, microfilm or in another procedure) without written permission or processed, multiplied or spread using electronic systems.

All information contained in this manual was arranged with largest care and after best knowledge. Nevertheless errors are to be excluded not completely. For this reason I see myself compelled to point out that I can take over neither a warranty nor the legal responsibility or any adhesion for consequences, which decrease/go back to incorrect data. This document does not contain assured characteristics. The guidance and the characteristics can be changed at any time and without previous announcement.